



INSTALLATION INSTRUCTIONS FOR DUAL THREAD LAMINAR AERATOR

Visit
DANCO.COM
for Easy D.I.Y. Solutions

Instructions

Tools Required: Pliers (optional)

1. Remove old Aerator (A) by turning counter clockwise. Use pliers if needed, being careful not to grip too tight.
2. Check Faucet Spout (B) for any Washers (C) that may be caught inside.
3. Install replacement Aerator (A) with Washer (C), turning clockwise. **Hand tighten only.**
4. Turn on water. If leak occurs, tighten with pliers.


Instrucciones

Herramientas requeridas: alicates (opcional)

1. Rota de derecha a izquierda el aireador viejo (A) para quitarlo. Usa alicates si es necesario, no lo sujetes con demasiada fuerza.
2. Revisa el vástago del grifo (B) para verificar que no haya quedado ninguna arandela (C) adentro.
3. Instala el aireador de repuesto (A) con la arandela (C) girando de derecha a izquierda.

Ajústalo sólo manualmente.

4. Abre el paso del agua. Si hay fugas, aprieta con los alicates.

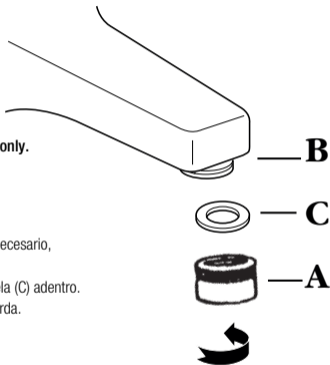

©2022 Manufactured for
Danco, Inc., Irving, TX 75062
Made in Taiwan/Hecho en Taiwan
10486i