




Instructions for Flange for Streamway® 88183

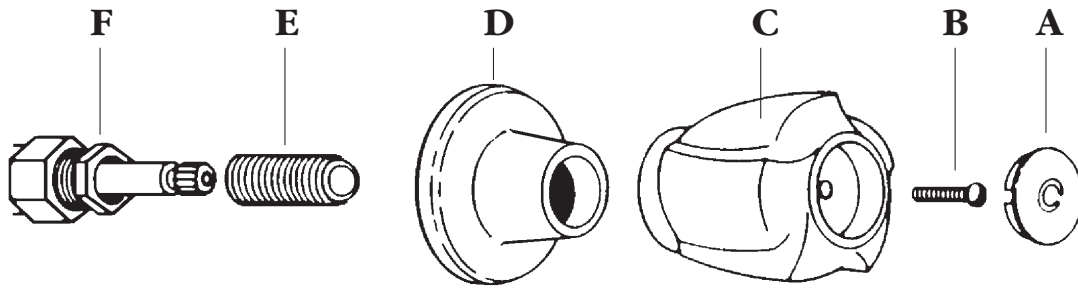

INSTRUCTIONS

TOOLS REQUIRED: Adjustable Wrench, Screwdriver

1. Remove handle (C) by prying off index button (A), removing screw (B) and pulling off handle (C).
2. Remove old flange (D) by unthreading.
3. Remove old flange nipple (E) by unthreading.
4. Install new nipple by threading tapered end into bonnet nut (F). It may be necessary to shorten new nipple but this can easily be done with a saw.
5. Install new flange (D) by threading onto nipple and tightening to wall.
6. Replace handle (C).

INSTRUCCIONES

HERRAMIENTAS NECESARIAS: Llave de tuercas, Destornillador

1. Quite la manija (C) retirando el botón indicador (A) y el tornillo (B) y tirando de la manija (C).
2. Retire la brida (D) usada desenroscándola.
3. Quite la boquilla de unión (E) usada desenroscándola.
4. Instale la boquilla de unión nueva enroscando el extremo cónico en la tuerca de sombrerete (F). A veces es necesario a cortar la boquilla de unión. Esto se puede hacer fácilmente con una sierra.
5. Instale la brida nueva (D) enroscándola en la boquilla de unión y afirmándola contra la pared.
6. Vuelva a colocar la manija (C).