CLOSET BOLTS

1/4" x 2-1/4"

PERNOS DEL INODORO

Visit
DANCO.COM
for Easy D.I.Y. Solutions

Contains:

- 2 Bolts
- 2 Nuts
- 2 Washers

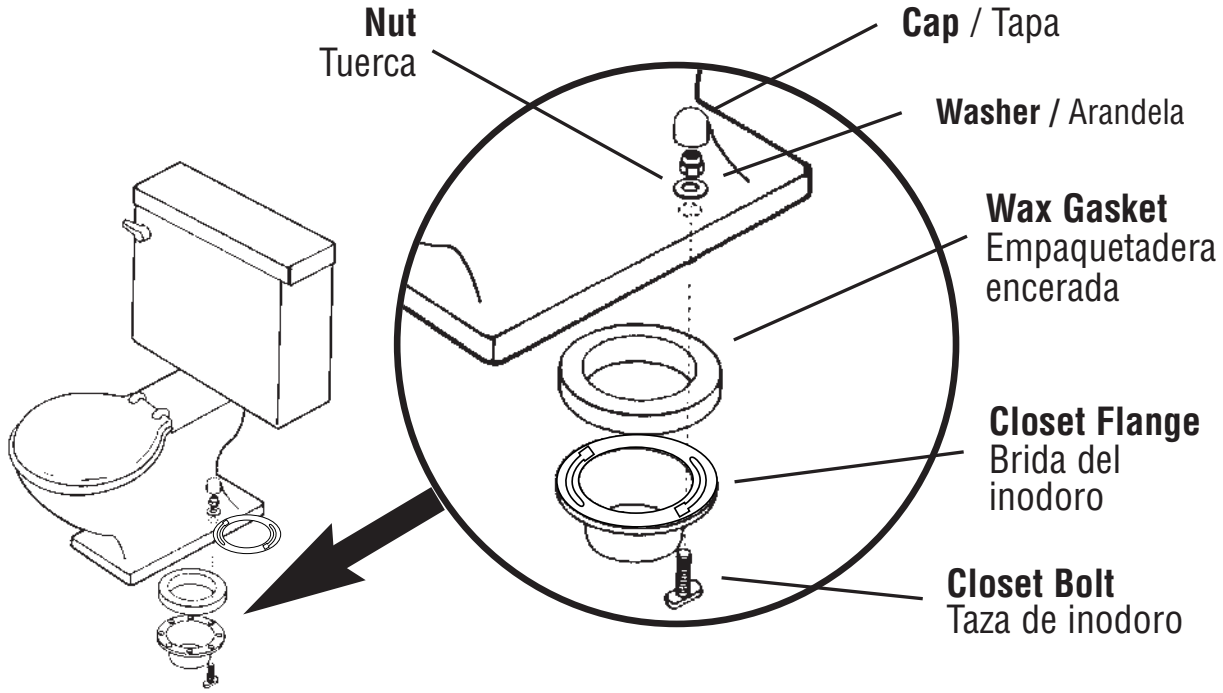

Instructions

Tools Required: Screwdriver

1. Insert bolts into flange with thread facing up. The bolt goes into a keyed opening in the flange from the top side. Slide square retainer washer down bolt to hold it upright.
2. Apply wax ring to hole of toilet. Align holes in bowl with closet bolts and carefully lower bowl.
3. Assemble washer and nut to closet bolt and tighten.
4. Install cap.

Instrucciones

Herramientas necesarias: destornillador

1. Insertar los pernos en la brida con la rosca hacia arriba. El perno entra en una abertura enchavetada en la brida desde el lado superior. Desliza la arandela cuadrada de retención hacia abajo para mantener el perno en posición vertical.
2. Aplica el anillo de cera al orificio del inodoro. Alinea los orificios de la taza con pernos de inodoro y baja cuidadosamente la taza.
3. Monte la arandela y la tuerca en el perno del inodoro y ajuste.
4. Instale la tapa.